

IG002

Thank you for your purchase of our product. Before using the watch, read this instruction manual carefully to ensure correct use. After reading the manual, store it in a safe place for future reference.

Safety Precautions (Instructions to be followed at all times)

This manual contains the following instructions that should be strictly followed at all times to prevent injury to yourself and other persons as well as damage to property.

Injuries and damage that might be caused by using the watch improperly or neglecting any of the instructions or precautions contained in this manual are classified with the following symbols.

DANGER Highly likely to cause death or serious injury

WARNING Can cause serious injury or death

CAUTION Can or will cause minor or moderate injury or damage

Important instructions that should be followed are classified with the following symbols.

Warning (Caution) symbol followed by instructions that should be followed or precautions that should be observed.

Warning (caution) symbol followed by prohibited matters.

Specifications

- Caliber number : F335
- Type : Analog quartz watch
- Quartz oscillator frequency : 32,768Hz (Hz : number of vibrations per seconds)
- Precision : Within±20seconds per month on average (when worn at normal temperatures of +5°C to +35°C)
- Operating temperature range : -10°C to +60°C
- Battery : Silver oxide battery : 1pce. The parts number of the battery 280-212 (CR1612)
- Battery life : about 2years after insertion of a new battery.

[To check the movement number]

A case number is engraved on the case back. (Figure on the under)
The first 4 digits of the case number represent the movement number of the watch.
In the example on the under, "1234" is the movement number.

Engraving position example



The engraving position may differ depending on watch model.

*Specifications are subject to change without notice.

How to use the screw down crown

*Some models feature a screw down crown. Unlocking is not required when a standard crown are equipped.

[Unlocking/relocking the screw down crown]




Rotate the crown counterclockwise (left) until it releases from the case.



Rotate the crown clockwise (right) while pushing it in, and tighten firmly.

Setting the Time

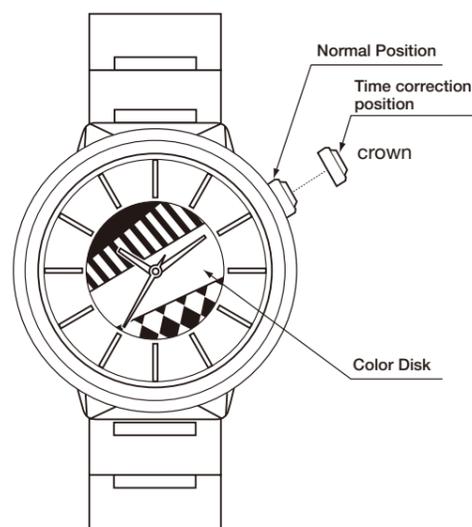

*The design and the patterns on the color disk shown in the illustrations in this instruction manual may differ from those of your watch.

- Pull the crown out to the first stop when the second hand stops at the 0-second position.
☆ When the crown is pulled out to the first stop, the color indications visible from color disk also stop.
- Turn the crown and adjust the time.
- While listening to the time signal on the phone, return the crown to the normal position to start the second hand from the correct time.
☆ When the second hand starts (1-second movement), the color disk simultaneously start moving.

[A Point for Setting Time Exactly]

- ☆ A more precise time setting can be obtained by first advancing the minute hand 4 to 5 minutes beyond the correct time, then returning it to the correct time and pushing the crown in according to the time signal.

< Color Disk >

This watch uses a color disk beneath the face which rotates once per minute, together with the second hand. In normal use the color disk causes no problems, but if it is subjected to strong impact, a temporary slowing of the watch can occur. Therefore, handle the watch with due caution. If the watch becomes slow, reset the time and continue using it normally.

Precautionary Items and Usage Limitations

WARNING Water Resistance

- Non-water resistant watches cannot be used underwater or in environments in contact with water.
- Water-resistance for daily use (to 3 atmospheres) means that the watch may be worn while washing your face or in the rain, but is not to be immersed in water.
- Upgraded water-resistance for daily use (to 5 atmospheres) means that the watch may be worn while swimming, but is not to worn while skin diving.
- Upgraded water-resistance for daily use (to 10/20 atmospheres) means that the watch may be worn while skin diving, but not while scuba or saturated diving using helium gas.

* Refer to the watch dial and the case back for the indication of the water resistance of your watch. The following chart provides examples of use for reference to ensure that your watch is used properly.
(The unit "1bar" is roughly equal to 1 atmosphere.)

Name	Indication	Specification	Water-related use				
			When water is simply splashed onto the watch (washing your face or in the rain)	Swimming and general washing work (kitchen work/ swimming, etc)	Water sport and skin diving (without air tank)	Scuba diving (with air tank)	Pulling out the crown when the watch is wet
Non-water-resistant watch	Watch dial and Case back	Non-water-resistant	×	×	×	×	×
Everyday-use water-resistant watch	WATER RESIST (ANT)	Water-resistant to 3 atmospheres	○	×	×	×	×
Upgraded everyday-use water-resistant watch	WATER RESIST(ANT) 5bar	Water-resistant to 5 atmospheres	○	○	×	×	×
Upgraded everyday-use water-resistant watch	WATER RESIST(ANT) 10/20bar	Water-resistant to 10 or 20 atmospheres	○	○	○	×	×

*WATER RESIST(ANT) xbar may also be indicated as W.R.xbar.

CAUTION To avoid injury

- Be particularly careful when wearing your watch while holding a small child, to avoid injury.
- Be particularly careful when engaged in strenuous exercise or work, to avoid injury to yourself and others.
- Do NOT wear your watch while in a sauna or other location where your watch may become excessively hot, since there is the risk of burns.
- Be careful when putting on and taking off your watch, since there is a risk of damaging your fingernails, depending on the manner in which the band is fastened.

CAUTION Precautions

- Always use the watch with the crown pushed in (normal position). If the crown is of the screw lock-type, make sure it is securely locked.
- Do NOT operate the crown when the watch is wet. Water may penetrate into the watch, causing deterioration of water resistance.
- If water enters the watch or the watch fogs up and does not clear up even after a long time, consult your dealer or Customer Support Center for inspection and/or repair.
- If a watch of upgraded water resistance for daily use is immersed in sea water or subjected to excessive perspiration, thoroughly rinse with fresh water and wipe completely dry with a soft cloth.
- If seawater enters the watch, place the watch in a box or plastic bag and immediately take it in for repair. Otherwise, pressure inside the watch will increase, and parts (crystal, crown, buttons, etc.) may come off.

CAUTION When Wearing your Watch

- <Band>**
 - The durability of a leather band may be affected when wet (fading, peeling of adhesive), owing to the properties of the material. Moreover, wet leather may cause a rash.
 - It is recommended to take off the watch if it gets wet, even if the watch itself is water-resistant.
 - Do Not wear the band too tightly. Try to leave enough space between the band and your skin to allow adequate ventilation.
 - The rubber (urethane) band may be stained by dyes or soil present in or on clothing or other accessories. Since these stains may not be removable, caution is required when wearing your watch with items that tend to easily transfer color (articles of clothing, purses, etc.). In addition, the band may be deteriorated by solvents or moisture in the air. Replace with a new one when it has lost elasticity or become cracked.

<Temperature>

- The watch may stop or the function of the watch may be impaired in extremely high or low temperature. Do not use the watch in places where the temperature is outside the operating temperature range as stated in the specifications.

<Magnetism>

- Analog quartz watches are powered by a step motor that uses a magnet. Subjecting the watch to strong magnetism from the outside can cause the motor to operate improperly and prevent the watch from indicating the correct time. Do not allow the watch to come into close proximity to magnetic health devices (magnetic necklaces, magnetic elastic bands, etc.) or the magnets used in the latches of refrigerator doors, clasps used in handbags, the speaker of a cell phone, electromagnetic cooking devices and so on.

<Strong Shock>

- Avoid dropping the watch or subjecting it to other strong impact. It may cause malfunctions and/or performance deterioration as well as damage to the case and bracelet.

<Static Electricity>

- The integrated circuits (IC) used in quartz watches are sensitive to static electricity. Please note that the watch may not indicate the correct time if exposed to intense static electricity.

<Chemicals, Corrosive Gases and Mercury>

- If paint thinner, benzene or other solvents or products containing these solvents (including gasoline, nail-polish remover, cresol, bathroom cleaners and adhesives, water repellent, etc.) are allowed to come into contact with the watch, the may discolor, dissolve or crack the materials. Be careful when handling these chemicals. Contact with mercury such as that used in thermometers may also cause discoloration of the band and case.

CAUTION Always keep your Watch Clean

- Rotate the crown while it is pressed in fully and press the buttons periodically so they do not become stuck due to accumulations of foreign matter.
- The case and band of the watch come into direct contact with the skin in the same manner as undergarments. Corrosion of the metal or unnoticed soiling such as that caused by perspiration and dirt can soil sleeves and other portions of clothing. Keep your watch clean at all times.
- The case and band of the watch come into direct contact with the skin. Rust, dirt or perspiration present on the watch's body or band may cause itching or a rash on your skin. Such problems may also occur if you have an allergy to certain metals or leather. If you think there is something wrong, discontinue wearing the watch immediately and consult your physician.
- Leather bands may become discolored by perspiration or dirt. Always keep your leather band clean by wiping with a dry cloth.

CAUTION Caring for your Watch

- Wipe any dirt or moisture such as perspiration from the case and crystal with a soft cloth.
- For a metallic, plastic or rubber watchband, wash any dirt off with water. Remove the small amounts of dirt trapped between the crevices of the metallic band with a soft brush.
- If you will not be using your watch for an extended period of time, carefully wipe off any perspiration, dirt or moisture and store in a proper location, avoiding locations subject to excessively high or low temperatures and high humidity.

<About luminous paint>

- The paint on the dial and hands helps you with reading the time in a dark place. The luminous paint stores light (daylight or artificial light) and glows in a dark place. It is free from any radioactive substance or any other material harmful to a human body or environment.
- The light emission gradually becomes weaker as time passes.
- The duration of the light ("glow") will vary depending on the brightness, types of and distance from a light source, exposure time, and the amount of the paint.
- The paint may not glow and/or may dissipate quickly if exposure to light was not sufficient.

CAUTION Battery handling

- Do not attempt to recharge an old battery.
- Do not dispose an old battery into a fire.
- Keep batteries out of reach of children.
- In the event a battery is swallowed, immediately consult a physician.
- Do not disassemble, modify, or heat the battery. Doing so may cause an accident.
- If a depleted battery is left in your watch, damage may be caused by leakage of battery fluid. Be sure to replace the battery promptly.
- Always be sure to select a battery of the correct specifications when replacing the battery.

Warranty and Service

1. Free Guarantee

In the case a malfunction has occurred during the course of normal use while the watch is still under warranty, the watch will be repaired free of charge in accordance with the conditions of the warranty included with this manual.

2. Stock Period of Repair Parts

Our's standard period for stocking repair parts for each model is generally seven years. When an exterior parts such as the watch case, glass, dial, hand, crown, button or band is damaged, a spare parts with different appearance may sometimes be used.

3. Repair Period

Repairs can be performed on your watch within the repair parts stock period even after the free guarantee has expired. However, you will be charged for these repairs. Please take the watch to the shop where you purchased it and ask whether it can be repaired because the repair period varies according to the conditions of use, environment and so forth. Moreover, there are cases in which it is difficult to restore the watch to its original accuracy when decreased accuracy has resulted from long-time use.

4. Change of Address or Receiving as a Gift

In the event that you have received your watch as a gift, and are not able to bring your watch to the shop where it was purchased for

servicing, please consult Citizen Consumer help desk or Customer Support Center.

5. Periodic Inspection (charge basis)

You should have your watch inspected (charge basis) every 2-3 years to extend its life and ensure safety. When replacing parts, always make sure to request genuine parts. When it becomes necessary to replace packings and springs, it may sometimes also be necessary to inspect other parts or to make repairs in addition to replacing the parts. Please ask for more detailed information on repair or replacement expenses at the shop where you purchased your watch or Citizen Consumer help desk, Customer Support Center.

6. Batteries

The battery was installed in your watch at factory is a monitor-use battery which monitors the functions and special features of your watch. You should keep in mind that the life of your battery could be shorter than the specified period is up. Even in the event that the battery runs out before the time specified in the guarantee, there will be a fee for replacing the battery.

7. Other Inquiries

If you have any questions regarding the way warranty, repairs or other matters, please inquire at the shop where you purchased your watch or Citizen Consumer help desk, Customer Support Center.

Memo